

Owner's Guide

CARE AND CLEANING

Polar Shades' products are virtually maintenance free and are made for a lifetime of wear-resistant, trouble-free performance. Roller shade fabrics are designed in such a way to repel dust and dirt; however, regular dusting is advised to maintain a clean appearance. Deeper cleaning may be performed by gently vacuuming the fabric with a clean furniture brush attachment on your vacuum cleaner.

If spot cleaning of your fabric is required, then a soft cloth or sponge dampened with lukewarm water may be used for this purpose, but avoid scrubbing. Use a dry cloth to absorb any excess moisture and leave the shade in a fully lowered position until it is completely dry.

Do not attempt to clean your roller screen with abrasives or harsh detergents.

CHILD SAFETY

Please be aware that it is possible for children to become accidentally entangled in a beaded chain/cord on manual roller shades with this type of lifting system. In an effort to reduce the risk of accidents, Polar Shades places a Warning Tag and Tension Device on each manual shade's beaded chain/cord prior to packaging that when properly installed reduces the hazards of strangulation and entanglement of young children by limiting their access to the beaded chain/cord. Be sure to position the Tension Device at a safe height on the window frame or wall in order to keep the chain/cord out of the reach of children.

It is wise to advise your customers with children in their homes or establishments to motorize their shade(s) in order to completely eliminate this risk.

